


**SMITH
& NOBLE**

*Rechargeable Motivia®
Motorization Made Simple*

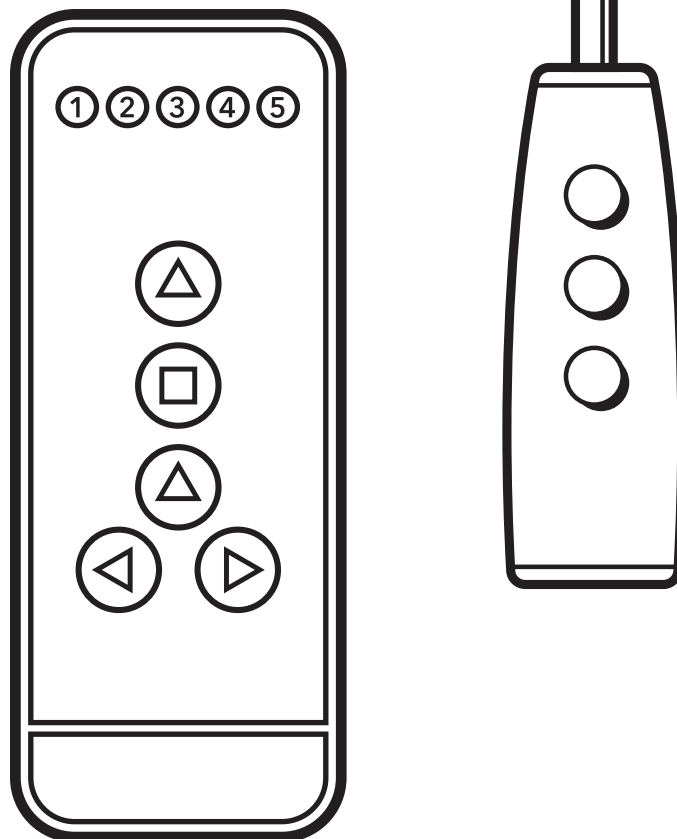

Roller Shades

Solar Shades

Honeycomb Shades


Natural Woven Shades

Fabric Shades

Operate Your Shade with a Motivia® Multi-Channel Remote


For added protection, your remote control arrived with a protective film on the top. Please remove this film prior to use.

- **STEP 1:** Select a channel using the *Channel* buttons
(Channel Display screen will indicate what channel you are on.)
- **STEP 2:** Press *Down* button to lower the shade or the *Up* button to raise the shade.
- **STEP 3:** Press the *Stop* button to stop the shade.
Please note: Factory has set the full closed and open stops on your shade(s).

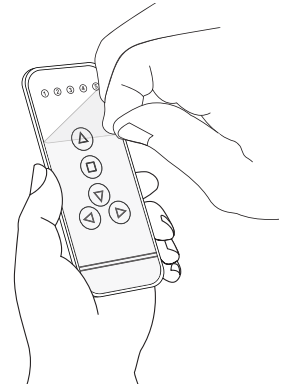


Change the Factory Programmed Auto Stop Positions

- **STEP 1:** Select the channel you wish to program.
(If programming more than 1 shade - unplug battery pack of other shades)
- **STEP 2:** Using a small screw driver or the end of a pen, press and hold the *Limit* button until shade jogs.
- **STEP 3:** Press *Down* button to lower the shade.
- **STEP 4:** Press *Stop* button when bottom rail reaches desired length.
Adjust length as needed by pressing the *Up* or *Down* button.
- **STEP 5:** Press the *Confirm* button to set the auto stop. The shade will jog.
- **STEP 6:** To set *Upper Limit* (location) repeat Steps 3-5 above using the *Up* button.

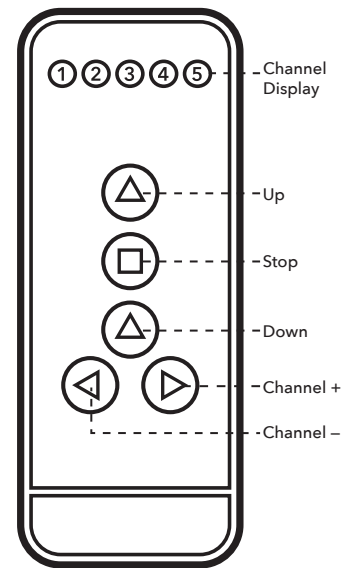

Setting and Using a Favorite Position

- **STEP 1:** use the *UP* or *DOWN* buttons to position the shade at the desired "favorite" position.
- **STEP 2:** First press and hold the *LIMIT* button on the back of the remote with a small screwdriver or tip of a pen. While holding the *LIMIT* button press and hold the *UP* button. Release both buttons when the shade jogs.
- **STEP 3:** With the shade at either the upper or lower limit, simply press the *STOP* button to bring the shade to the "favorite" position.
- **STEP 4:** To go to the "favorite" position from any other location, make sure the shade has been stopped for at least three seconds before pressing the *STOP* button.

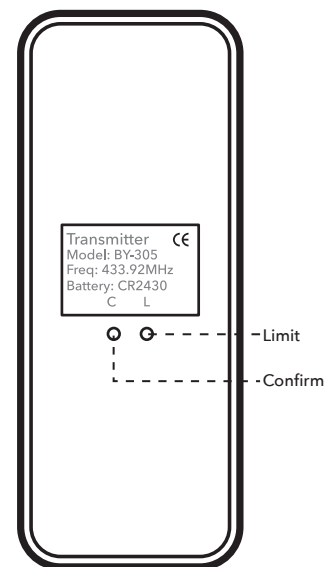

WHAT IS JOGGING? Jogging refers to the shade shifting up and down.


Operate Your Shade with a Motivia® Wand

Press the **DOWN** or **UP** button to lower or raise the shade.

Press the **STOP/FAVORITE** to stop the shade at the desired position.

To fully raise or lower the shade, simply press the **UP** or **DOWN** button and then release. The shade will automatically stop when it reaches the upper or lower limit. *(If the upper or lower limits are not set at the desired positions, see the Adjust Motor Limits section below)*

Note: Upper and lower limits stops are set at the factory. An intermediate, or "favorite" position is not set at the factory. See page 3 for more information.

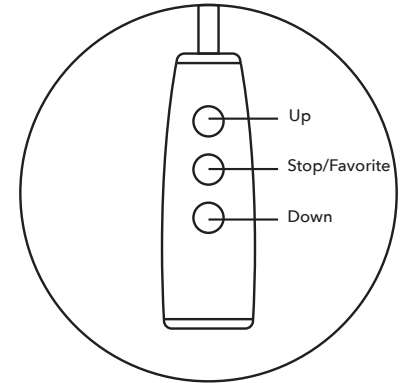


Adjust Motor Limits (if desired)

The Upper and Lower Limits have been set at the factory. If you need to make adjustments to the limits, follow the instructions below.

Press the red *Settings* button on the motor and hold it in until the motor stops beeping. This will clear both the upper and lower factory limits.


- **SET UPPER LIMIT** - Press the *Up* button to get the shade close to the upper limit and then press the *Down* button to stop the shade. Tap the *Up* or *Down* button to move the shade to the desired position. To save the location, press the *Up* and *Down* buttons at the same time, until the motor beeps.
- **SET LOWER LIMIT** - Press the *Down* button to get the shade close to the lower limit and then press the *Up* button to stop the shade. Tap the *Up* or *Down* button to move the shade to the desired position. To save the location, press the *Up* or *Down* buttons at the same time, until the motor beeps.

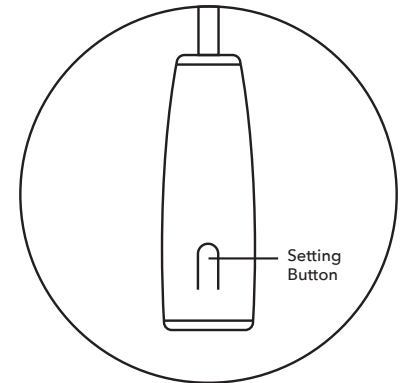

Setting and Using a Favorite Position


Use the **UP** or **DOWN** buttons to position the shade at the desired "favorite" position. First press and hold the **SETTING** button the back of the wand. While holding the **SETTING** button, press and hold the **UP** button. Release both buttons when the shade beeps.

With the shade at either the upper or lower limit, simply press the **STOP/FAVORITE** button to bring the shade to the "favorite" position. To go to the "favorite" position from any other location, make sure the shade has been stopped for at least three seconds before pressing the **STOP/FAVORITE** button.

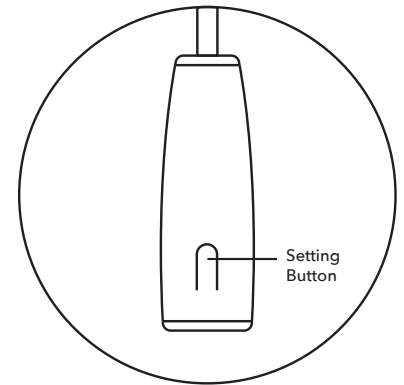

Changing a Favorite Position

Use the **UP** or **DOWN** buttons to position the shade at the new desired "favorite" position. First press and hold the **SETTING** button on the back of the wand. While holding the **SETTING** button, press and hold the **UP** button. Release both buttons when the shade beeps. This establishes a new "favorite" position and erase the old.

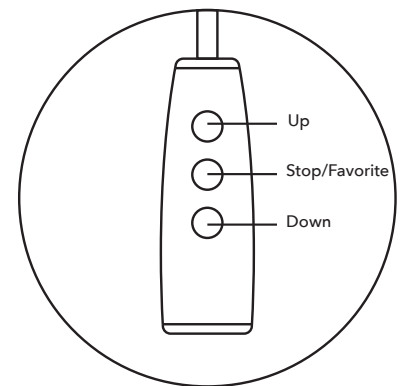

Questions and Answers

PROBLEM: Shade will not raise or lower.

SOLUTION: Recharge the motor.

PROBLEM: Shade continues to move in up or down direction.

SOLUTION: Reset the stop positions. See '*Change The Factory Programmed Auto Stop Positions*' section on previous page.

PROBLEM: Channel Display screen on Motivia remote does not light up.

SOLUTION: Replace the battery in the remote with a CR2430 Lithium battery.

PROBLEM: The distance required to operate shade with Motivia remote becomes shorter.

SOLUTION: Replace the battery in the remote with a CR2430 Lithium battery.

PROBLEM: Nothing I do seems to work for the Motivia remote shades.

SOLUTION: REBOOT and RELINK (also known as When in Doubt, Clear it Out). (see next page)

PROBLEM: Shade goes up when down button is pushed and down when up button is pushed.

SOLUTION: Press the *Limit* button on the underside of remote or settings button on the wand and the *Stop* button at the same time.
Hold until the shade jogs once. Shade should now move in the correct direction.

PROBLEM: The motor beeps when operated.



SOLUTION: The battery power is low. Recharge the motor.

If all else fails, simply REBOOT and RELINK, and begin the entire programming process over.


REBOOT and RELINK is also known as, *When in Doubt, Clear it Out.*

- STEP 1: Hold the *Settings** button down. For Honeycomb Shades, you will need to first remove the shade from the window to get to the Settings button. Once the red *Settings* button is located, hold it down. The motor will jog during this time and sound like (jog, jog/jog). After the shade completes a single set of jogs, release the red button.
- STEP 2: Hold the *Settings* button down again. However, this time hold it ONLY long enough so that the shade jogs ONCE. Release the button as soon as it jogs.
- STEP 3: Select the desired channel on the remote.
- STEP 4: Flip the remote over to reveal the two buttons, C-Confirm and L-Limit.
- STEP 5: Press and hold the *Confirm* button (left side button) until the shade jogs.
Note: If the shade does not respond, repeat Step 2 above to link shade to remote.
- STEP 6: Press and hold the *Limit* button (right side button) until the shade jogs.
- STEP 7: Push and release the *Up* or *Down* button for more than 2 seconds, to move the shade to the desired upper or lower positions.
- STEP 8: When the shade nears your desired upper or lower positions, press the *Stop* button.
- STEP 9: Press the *Up* or *Down* buttons for less than 2 seconds, to adjust your shade to the precisely desired upper or lower limit. The shade will jog one step each time you press *Up* or *Down*.
- STEP 10: When the shade has reached the desired location, press and hold the *Confirm* button until the shade jogs. Your limit is now set.
- STEP 11: Repeat steps 7 - 10 to set your opposite (either upper or lower) limit.
- STEP 12: Run the shade up and down to be sure the limits are set correctly.

Top View - Motor in right end of Honeycomb Headrail

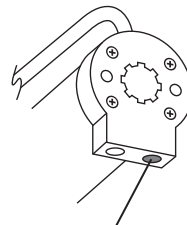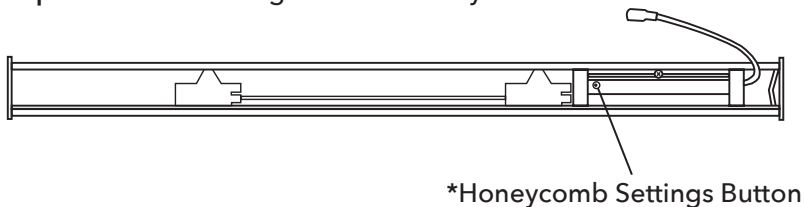

**Without Headrail Roller/Solar, Natural Woven and Fabric Shade Settings Button

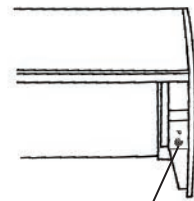

**With Headrail Roller/Solar Settings Button

* Honeycomb *Settings* button is located on the top of the motor inside the shade.

**Solar/Roller, Natural Woven and Fabric Shade *Settings* button is located on the underside of motor of shades.