

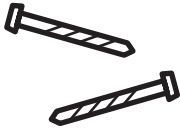


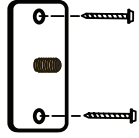


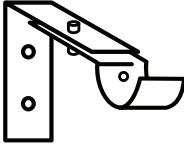


Parts & Tools

 <p>SCREWS (2 PER BRACKET)</p>	 <p>BACK PLATE</p>
 <p>CENTER SUPPORT ADJUSTABLE BRACKET</p>	 <p>CENTER SUPPORT 6" EXTENSION BRACKET</p>
 <p>REGULAR RINGS</p>	 <p>PENCIL (NOT INCLUDED)</p>
 <p>LEVEL (NOT INCLUDED)</p>	 <p>SCREWDRIVER (NOT INCLUDED)</p>
 <p>POWER DRILL (NOT INCLUDED)</p>	

Warranty Service


The enjoyment of your hardware should be everlasting, which is why our products come with a lifetime warranty. The warranty applies to the original owner, requires a proof of purchase (hang on to your receipt!) and covers defects in material or craftsmanship. Hardware must have been properly installed. We reserve the right to determine if your hardware warrants a repair or a replacement. Visit smithandnoble.com/guarantee to see full details. In need of warranty service? Call us at 800.248.8888 and we'll arrange for a repair or replacement ASAP.

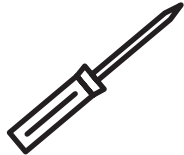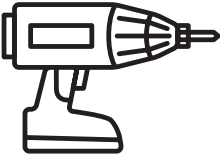Installation Instructions

Madrid Hardware



Everything You Need

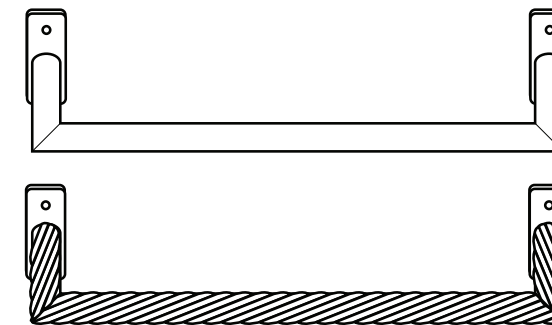

Wall Mount

**SMITH
& NOBLE**

800.248.8888

A Smooth Set-Up

We want you to love your new hardware and that includes having a smooth installation experience. If you encounter any difficulties or questions, please reach out to us for help. It's why we're here. Call us at 800.248.8888 or visit www.smithandnoble.com/knowhow for more info on installation.

We recommend you hold on to all packaging until your hardware is fully installed. Should something go wrong (we strongly doubt it), we want any potential returns to be a painless as possible.

Customer Service Hours

Monday – Friday: 6am – 6pm PST

Saturday – Sunday: 7am – 4pm PST

Getting Started

Before you begin, check the accompanying diagram to make sure you have all the parts you need.

You'll need to make sure the surface you intend to install your hardware is sturdy enough to accommodate the brackets. If you're screwing directly into a surface this means locating wood studs that are strong enough to securely bond with the included screws. Otherwise, you'll need to use a secure fastener (as illustrated) but please note this piece is not included.


MOLLY BOLT



SELF DRILLING ANCHOR



TOGGLE BOLT

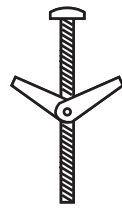

WALLBOARD OR PLASTER:

Hollow wall applications: Use a secure fastener designed specifically for this purpose.

METAL:

Prepare by pre-drilling holes and then using the included screws.

CONCRETE, STONE, BRICK OR TILE:

Use a masonry drill and surface-specific plugs, anchors, or screws. When selecting a fastener be sure it's designed to support the weight of the product being installed (if you're not sure, either give us a call or ask a professional at your local hardware store). Once obtained, follow the fastener manufacturer's instructions regarding proper installation.


TOOLS YOU WILL NEED TO INSTALL YOUR HARDWARE:

Pencil, screwdriver, 1/4" nut driver, level, and a drill with a 7/64" drill bit.

Note: It's important to monitor the amount of pressure you apply when using a drill. If the screws are too tight this may cause the screw itself to break off in the wall or window frame.

Installation Steps

Installing Single Rod Sets

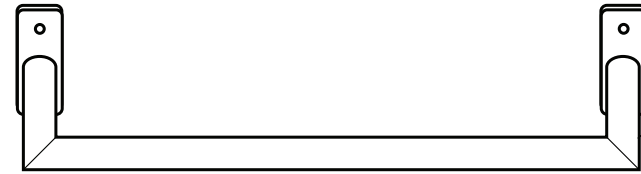

STEP 1:

Place panel on rod and then screw on backplates to rod ends. Center the rod over the window opening. To ensure it drapes at the correct length, hold the rod up to the spot you wish to install it. Raise or lower your treatment as desired.

STEP 2:


After you have located the ideal location, make sure the rod is level and use a pencil to mark the screw holes in the backplates above the window or door frame where the brackets will be mounted. If you received center support bracket place it in the middle point between the two backplates and mark the screw holes in it as well.

STEP 3:

Once you have established where everything should go, pre-drill the holes in their assigned spots, making sure it is the right depth for the supplied screws. Install the return rod with the backplates attached, using the screws provided.

Baton/Wand

Attach the baton to the eyelet of the first ring by the clip.

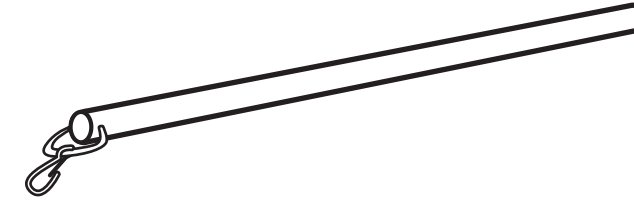

Standard & Double End Brackets

ROD QTY	BRACKET QTY	ROD WIDTH
1	2	12"–48"
1	3	48 1/8"–72"
1	3	72 1/8"–96"
1	4	96 1/8"–144"

Care & Cleaning

Minimal care and cleaning is needed to maintain the beauty of your Hardware.

To Vacuum: Use brush or dust head attachment. Occasional light vacuuming with a soft bristle attachment or gentle feather dusting is all that is required to keep your hardware looking fresh and neat.

To Dust: Use soft, clean cloth.

