

## Parts & Tools

 <p><b>SCREWS</b> (2 PER BRACKET)</p>	 <p><b>INSIDE MOUNT BRACKET</b></p>
 <p><b>REGULAR RINGS</b></p>	 <p><b>SET SCREWS &amp; ALLEN WRENCHES</b></p>
 <p><b>PENCIL</b> (NOT INCLUDED)</p>	 <p><b>SCREWDRIVER</b> (NOT INCLUDED)</p>
 <p><b>POWER DRILL</b> (NOT INCLUDED)</p>	 <p><b>LEVEL</b> (NOT INCLUDED)</p>

### Warranty Service


The enjoyment of your hardware should be everlasting, which is why our products come with a lifetime warranty. The warranty applies to the original owner, requires a proof of purchase (hang on to your receipt!) and covers defects in material or craftsmanship. Hardware must have been properly installed. We reserve the right to determine if your hardware warrants a repair or a replacement. Visit [smithandnoble.com/guarantee](http://smithandnoble.com/guarantee) to see full details. In need of warranty service? Call us at 800.248.8888 and we'll arrange for a repair or replacement ASAP.

## Installation Instructions

# *Petite Café Hardware*



# Everything You Need

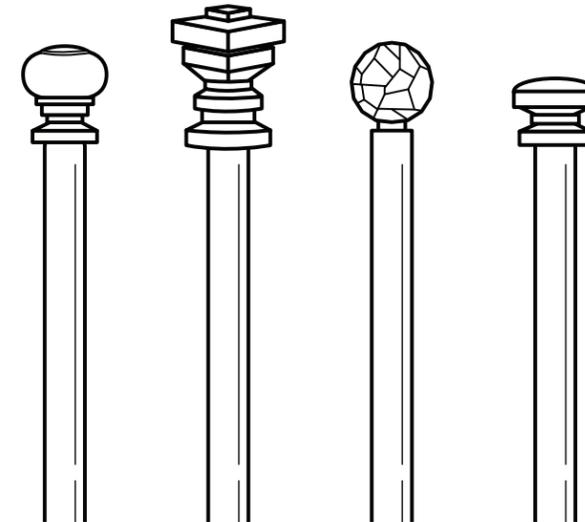

### A Smooth Set-Up

We want you to love your new hardware and that includes having a smooth installation experience. If you encounter any difficulties or questions, please reach out to us for help. It's why we're here. Call us at 800.248.8888 or visit [www.smithandnoble.com/knowhow](http://www.smithandnoble.com/knowhow) for more info on installation.

We recommend you hold on to all packaging until your hardware is fully installed. Should something go wrong (we strongly doubt it), we want any potential returns to be a painless as possible.

### Inside Mount

**SMITH  
& NOBLE**

800.248.8888

### Customer Service Hours

Monday – Friday: 6am – 6pm PST

Saturday – Sunday: 7am – 4pm PST

# Getting Started

Before you begin, check the accompanying diagram to make sure you have all the parts you need.

You'll need to make sure the surface you intend to install your hardware is sturdy enough to accommodate the brackets. If you're screwing directly into a surface this means locating wood studs that are strong enough to securely bond with the included screws. Otherwise, you'll need to use a secure fastener (as illustrated) but please note this piece is not included.


### MOLLY BOLT



### SELF DRILLING ANCHOR



### TOGGLE BOLT ANCHOR



### WALLBOARD OR PLASTER:

Hollow wall applications: Use a secure fastener designed specifically for this purpose.

### METAL:

Prepare by pre-drilling holes and then using the included screws.

### CONCRETE, STONE, BRICK OR TILE:

Use a masonry drill and surface-specific plugs, anchors, or screws. When selecting a fastener be sure it's designed to support the weight of the product being installed (if you're not sure, either give us a call or ask a professional at your local hardware store). Once obtained, follow the fastener manufacturer's instructions regarding proper installation.


### TOOLS YOU WILL NEED TO INSTALL YOUR HARDWARE:

Pencil, screwdriver, 1/4" nut driver, level, and a drill with a 7/64" drill bit.

*Note: It's important to monitor the amount of pressure you apply when using a drill. If the screws are too tight this may cause the screw itself to break off in the wall or window frame.*

# Installation Steps

## Installing Inside Mount Bracket

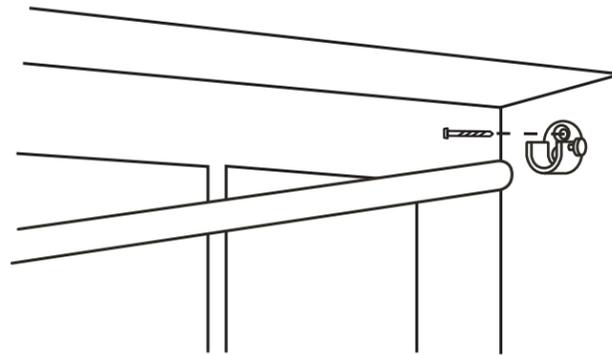

### STEP 1:

Place the panel on the rod. To ensure it drapes at the correct length hold it up to the spot you wish to install it. After you've located the ideal location, use a pencil to mark the window or door frame where the top of the rod is resting.

### STEP 2:

Place the bracket directly at the marked height and then note the location of the screw hole with your pencil. Once you've established where everything should go, put the bracket aside and double-check to make sure the pencil marks are level with each other. Next, pre-drill the holes in their assigned spot, making sure it's the right depth for the supplied screws. Install your brackets.


### STEP 3:

For treatments using rings, place the required number of rings on rod, and then place on brackets.

For treatments without rings, position the drapery panels on rod, and then place on brackets.

## Baton/Wand

Attach the baton to the eyelet of the first ring by the clip.

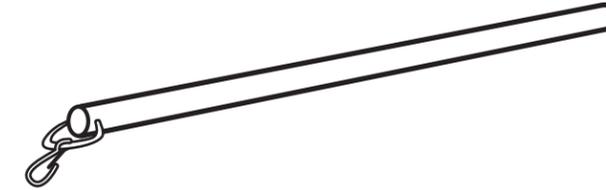

## Brackets & Rod Chart

ROD QTY	BRACKET QTY	ROD WIDTH
1	2	24" - 72"





## Care & Cleaning

Minimal care and cleaning is needed to maintain the beauty of your Hardware.

To Vacuum: Use brush or dust head attachment. Occasional light vacuuming with a soft bristle attachment or gentle feather dusting is all that is required to keep your hardware looking fresh and neat.

To Dust: Use soft, clean cloth.

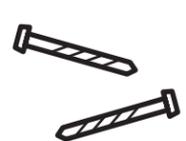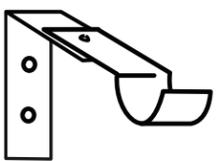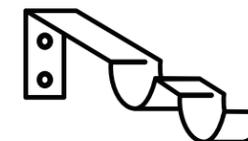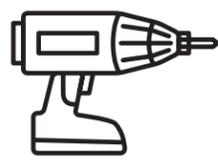

 <p><b>SCREWS</b> (2 PER BRACKET)</p>	 <p><b>REGULAR RINGS</b></p>
 <p><b>COMPACT SINGLE ROD BRACKET</b></p>	 <p><b>6" SINGLE EXTENSION BRACKET</b></p>
 <p><b>ADJUSTABLE EXTENSION SINGLE ROD BRACKET</b></p>	 <p><b>DOUBLE ROD BRACKET</b></p>
 <p><b>LEVEL</b> (NOT INCLUDED)</p>	 <p><b>SET SCREWS &amp; ALLEN WRENCHES</b></p>
 <p><b>PENCIL</b> (NOT INCLUDED)</p>	 <p><b>SCREWDRIVER</b> (NOT INCLUDED)</p>
 <p><b>POWER DRILL</b> (NOT INCLUDED)</p>	


### Warranty Service

The enjoyment of your hardware should be everlasting, which is why our products come with a lifetime warranty. The warranty applies to the original owner, requires a proof of purchase (hang on to your receipt!) and covers defects in material or craftsmanship. Hardware must have been properly installed. We reserve the right to determine if your hardware warrants a repair or a replacement. Visit [smithandnoble.com/guarantee](http://smithandnoble.com/guarantee) to see full details. In need of warranty service? Call us at 800.248.8888 and we'll arrange for a repair or replacement ASAP.

# Petite Café Hardware



## Everything You Need

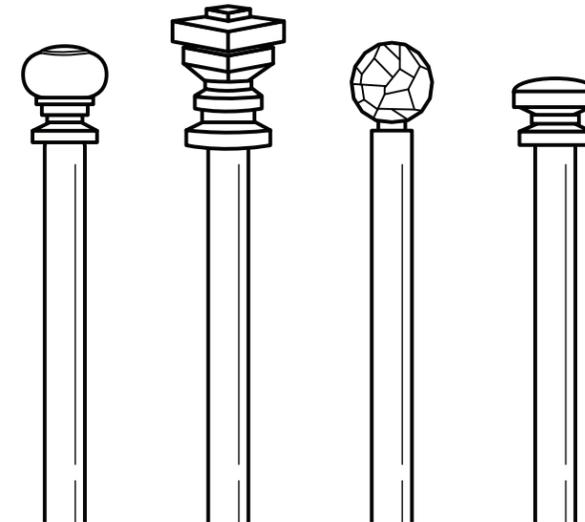

### Wall Mount

**SMITH & NOBLE**

800.248.8888

### A Smooth Set-Up

We want you to love your new hardware and that includes having a smooth installation experience. If you encounter any difficulties or questions, please reach out to us for help. It's why we're here. Call us at 800.248.8888 or visit [www.smithandnoble.com/knowhow](http://www.smithandnoble.com/knowhow) for more info on installation.

We recommend you hold on to all packaging until your hardware is fully installed. Should something go wrong (we strongly doubt it), we want any potential returns to be a painless as possible.

### Customer Service Hours

Monday – Friday: 6am – 6pm PT  
Saturday – Sunday: 7am – 4pm PT

# Getting Started

Before you begin, check the accompanying diagram to make sure you have all the parts you need.

You'll need to make sure the surface you intend to install your hardware is sturdy enough to accommodate the brackets. If you're screwing directly into a surface this means locating wood studs that are strong enough to securely bond with the included screws. Otherwise, you'll need to use a secure fastener (as illustrated) but please note this piece is not included.



**WALLBOARD OR PLASTER:**

Hollow wall applications: Use a secure fastener designed specifically for this purpose.

**METAL:**

Prepare by pre-drilling holes and then using the included screws.

**CONCRETE, STONE, BRICK OR TILE:**

Use a masonry drill and surface-specific plugs, anchors, or screws. When selecting a fastener be sure it's designed to support the weight of the product being installed (if you're not sure, either give us a call or ask a professional at your local hardware store). Once obtained, follow the fastener manufacturer's instructions regarding proper installation.


**TOOLS YOU WILL NEED TO INSTALL YOUR HARDWARE:**

Pencil, screwdriver, 1/4" nut driver, level, and a drill with a 7/64" drill bit.

*Note: It's important to monitor the amount of pressure you apply when using a drill. If the screws are too tight this may cause the screw itself to break off in the wall or window frame.*

# Installation Steps

## Installing Single & Double Rod Sets

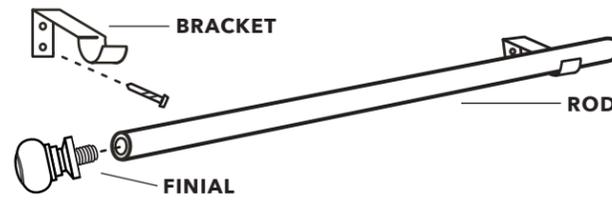

**STEP 1:**

Place the panel on the rod. To ensure it drapes at the correct length, hold it up to the spot you wish to install it. Raise or lower your treatment as desired. After you've located the ideal location, use a pencil to mark the wall above the window or door frame where the top of the rod is resting.

**STEP 2:**

Remove the panel from the rod and then center the rod over the window opening at the desired height. Using the pencil, mark where the ends of each rod are positioned; if you're using a center bracket, note the middle point between these two spots as well. Measure 2" inward from the marks you've made on both ends and mark those spots. This is where the brackets will be installed.

**STEP 3:**

Place the top of the bracket directly at the marked height and then note the location of the bottom screw hole with your pencil. Once you've established where everything should go, put the bracket aside and double-check to make sure the pencil marks are level with each other. Next, pre-drill the holes in their assigned spot, making sure it's the right depth for the supplied screws. Install your brackets.

**STEP 4:**


For treatments using rings, attach the finial to one end of the rod, place the required number of rings, and then cap the opposite end with the second finial.

When placing the rod on the brackets, leave one ring between the finial and bracket on each side. This will prevent drapery to be pulled all the way to one side or the other when opening and closing it.

For treatments without rings, attach the finial to one end of the rod, position the drapery panels on rod, and then cap the opposite end with the second finial.

## Attaching the Finial

Petite Café finials will come with a threaded base.

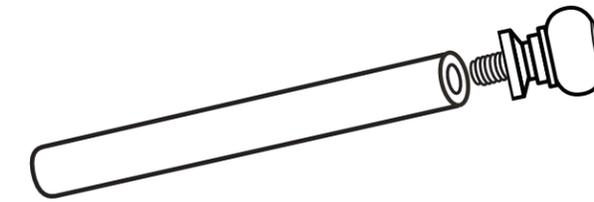


**STEP 1:**

Simply screw the finial into the threaded end of the rod.

## Baton/Wand

Attach the baton to the eyelet of the first ring by the clip.

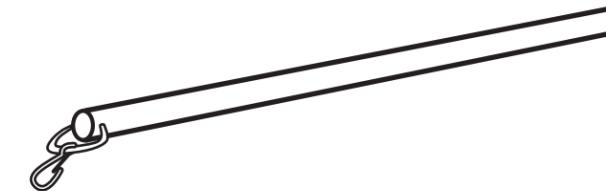

## Brackets & Rod Chart

ROD QTY	BRACKET QTY	ROD WIDTH
1	2	24" - 48"
1	2	48 1/8" - 72"
1	3	72 1/8" - 96"
2	4	96 1/8" - 144"
2	5	144 1/8" - 192"

## Care & Cleaning

Minimal care and cleaning is needed to maintain the beauty of your Hardware.

To Vacuum: Use brush or dust head attachment. Occasional light vacuuming with a soft bristle attachment or gentle feather dusting is all that is required to keep your hardware looking fresh and neat.

To Dust: Use soft, clean cloth.

