TEKNO 40 INSTALLATION INSRUCTIONS

STEP 1 - Installing Supports

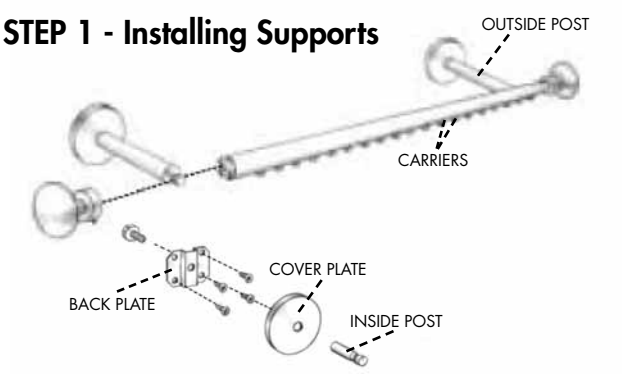

Height calculation for regular clips.

Add 1" to length of drapes, plus at least 1/2" clearence from the floor. This measurement is the distance from floor to center point of Back Plate. ***Please note drapes should not touch rail, install pin on hooks with this in consideration.***

1. Install Back Plate to wall. Make sure all M-6 bolts are level. If you have a spliced track the Center Support must be installed at the position of splice.
2. Cover Back Plate with Cover Plate.
3. Screw on Inside Post very securely. Do not leave any play.

STEP 2 - Splice track if necessary

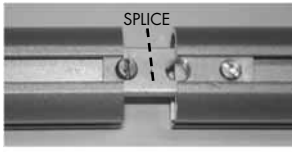

1. Join the track sections together.

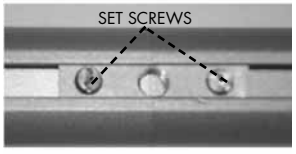

2. Tighten set screws.

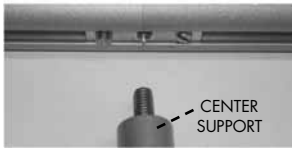

3. Screw Center Support directly into center hole of Splice.

STEP 3 - Installing Outside Posts

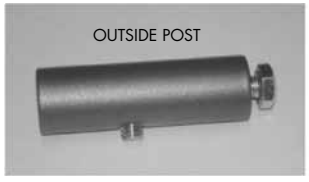

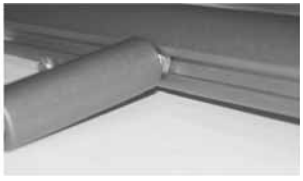

1. Loosen all screws on Outside Posts.
2. Slide Ouside Posts into back channel of track.
3. Align Outside Posts with Inside Posts from **Step 1**.

STEP 4 - Mount Rail onto supports

1. Slide Outside Posts over Inside Posts.
2. Once all Outside Posts including Center Supports are in place, tighten posts securely by turning clockwise.
3. Tighten set screws.
4. Finished result for Center Supports.
5. Finished result for side posts.

STEP 5a - Installing Carriers (Hand Draw system)

1. Slide Carriers into track.
2. Attach Fling Rod to side of drape you wish to operate from, by clipping it into first carrier.
3. Use plastic plug to lock last carrier in place so end of drape does not move when drape is closed.

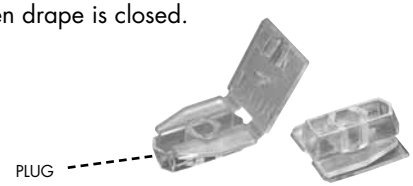

STEP 5b - Installing Carriers (Corded system)

1. Remove plug next to control mechanism.
2. Insert Carriers in track via slot. Ball Bearing carriers require removal of end caps or control mechanism.

STEP 6a - Installing Finials (Hand Draw system)

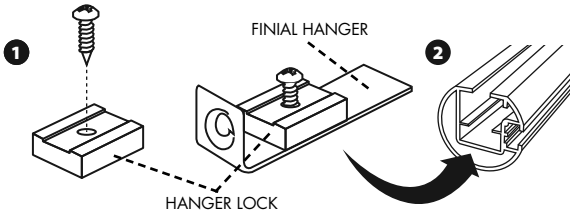

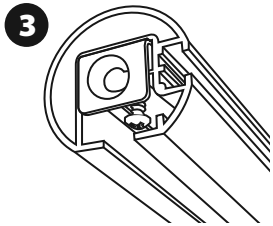

1. Place Hanger Lock and set screw onto Finial Hanger.
2. Slide Finial Hanger ensamble into track.
3. Make sure Finial Hanger is flush with end of track, then tighten set screw.
4. Screw finial into Finial Hanger

STEP 6b - Installing Finials (Corded system)

1. Screw finial into Finial Hanger

INSTALLATION OF EURO-SCOPE UPGRADE

STEP 1 - Assembling track when splicer is included

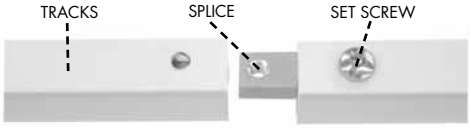

1. Join track sections together and fasten securely with set screws.

STEP 2 - Installing mounting hardware

1. Assemble Upgrade Clips for Outside Posts.
2. Attach assembled clip to Outside Posts.
3. Partially assemble Upgrade Clip for Center Post.
4. Mount Center Clip to Center Post and finish assembly.
5. Finished result of Center Clip
6. Clips must align to be able to install track.

STEP 3 - Installing track

1. Place the front lip of the track into the front edge of the clip. Rotate the back of the track up into the clips and snap into place.

STEP 4 - Installing Fling Rod

1. Install Finials, and then click-in carriers.
2. Attach Fling Rod to side you wish to operate, by clipping it to carrier.

STEP 5 - Installing Pulley

1. Determine if cord is on the side you wish to operate. Control side can be changed by pulling cord through opposite control.
2. For **center opening tracks only**, click in plastic plug at center point of rail. This plug will support cords during installation of cord tension pulley.
3. Attach cord to pulley. Stretch pulley and create sufficient tension so cord remains in track. Do not apply excessive tension. Mark spot with pencil on wall or floor.
4. Remove cords and fasten pulley to wall or floor. Re-install cords.

- **The pulley must be installed. It is the Law. Failure to do so can result in injury to children or pets.**